

Tech Tip



From your friends at New York Bus Sales

Product Effectuated – Units w/Specialty Stop Arms

- Complaint -** The wires to the lights on our stop arms are constantly breaking.
- Cause -** The routing of the wire is in such a position that with the constant movement of the sign back and forth that the wire weakens and breaks. (Please see FIG #1)
- Correction -** When you remove the stop arm base cover you will notice a hole in the bottom just in front of the pivot (Please see FIG #2) and if you find a grommet to fit that hole or a piece of rubber hose you can run the wire down through to the lights allowing a loop to form (Please see FIG #3) and this will allow the stop arm to work without bending and weakening the wire.

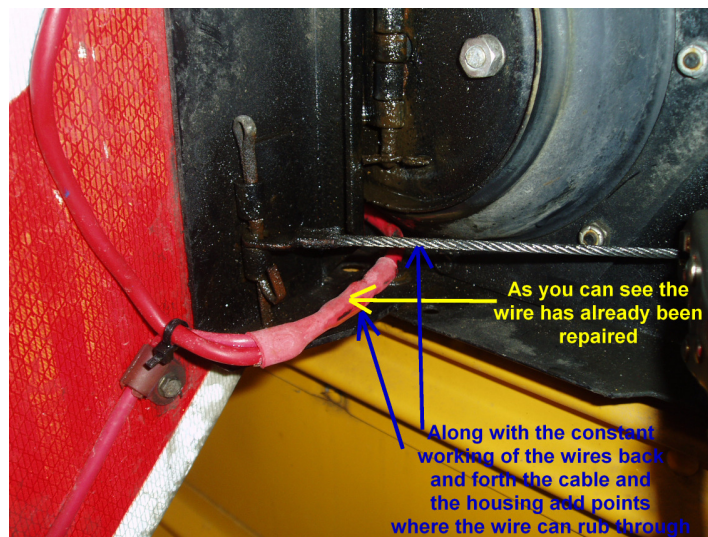


Figure #1



Locating the existing hole in the stop arm body, installing a rubber grommet and then running the light wire through



Once down through the hole, run the wire to the lights leaving a "loop"-this will not allow the wire to bend and break nor will it be rubbing



Special Thanks to Roger from Phelps-Clifton Springs Central School for pointing this out!!!!

Contact Our Service Department With Any Questions

CHITTENANGO – phone 800-962-5768 or
Daryl Wallace : dwallace@newyorkbussales.com
Brian Lamaitis : blamaitis@newyorkbussales.com

ROCHESTER – phone 800-463-3232 or
Gary Chichester: gchichester@newyorkbussales.com

ALBANY – phone 866-867-1100 or
Ben Reiling: breiling@newyorkbussales.com
Steve Searles: ssearles@newyorkbussales.com

– Specifics –
Warranty 24 Months/24,000 Miles

