

Air Brake Valve Issue – PP1 (Park Brake Valve)

Complaint – Doing a DOT air brake test on a unit we drain the wet tank and then move to the secondary once the secondary gets down to between 45-60lbs the PP1 valve pops

and the primary tank starts to drain

Cause – Whereas we most might first think that there is a check valve causing the issue,

we have found that the actual issue is the PP1 valve. It appears that the change

in pressures causes the valve to "pop" prematurely.

Correction – Replace the PP1 Valve



Contact Our Service Department With Any Questions

CHITTENANGO – phone 800-962-5768 or

Daryl Wallace: dwallace@newyorkbussales.com

Brian Lamaitis : <u>blamaitis@newyorkbussales.com</u>

ROCHESTER – phone 800-463-3232 or

Gary Chichester: gchichester@newyorkbussales.com

ALBANY - phone 866-867-1100 or

Ben Reiling: breiling@newyorkbussales.com

Steve Searles: ssearles@newyorkbussales.com

WARRANTY - 800-962-5768 ext 237

Morgan Jenkins: mjenkins@newyorkbussales.com

ALL of our Tech Tips can be found on the New York Bus Sales website at http://www.newyorkbussales.com/pages/bulletins.cfm
Or at the New York Head Mechanic website at http://www.nyhma.org/viewforum.php?f=2&start=0