

Tech Tip



From your friends at New York Bus Sales

- Complaint -** Bus was designed not to start when the fuel door is opened but when we were checking it noticed that it did start when the door was open.
- Cause -** The magnet on the fuel door used to operate the switch has moved away from its intended position.
- Correction -** If you look at Figure #1 you can see the switch located in the fuel fill compartment. Looking further in Figure #2 you can see where the magnet has rolled down to the bottom of the fuel door and is resting on the lip of the door. Adding some silicone to the frame of the opening as in Figure #3 and placing the magnet in the silicone as in Figure #4 and letting it sit and dry will assure the magnet will not “roll” from its position.

PLEASE NOTE: It is recommended that the switch operation be checked at each PM.

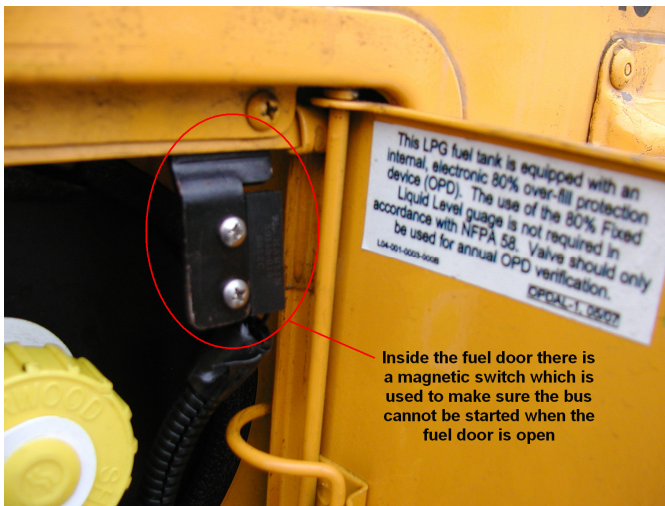


Figure #1

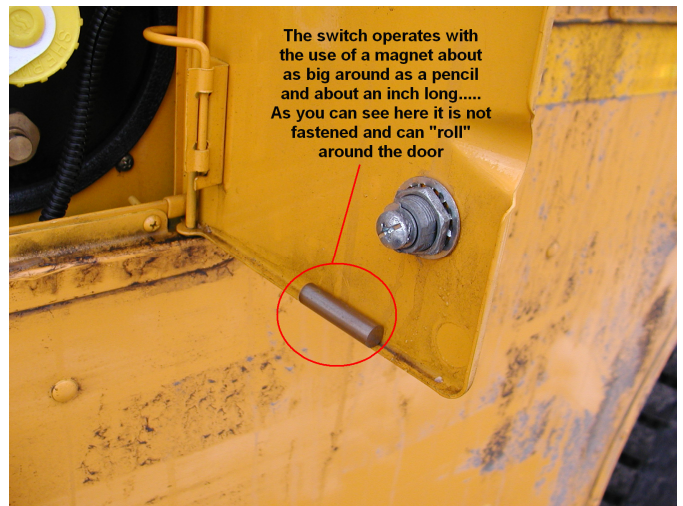


Figure #2



Figure #3



Figure #4



Contact Our Service Department with Any Questions

CHITTENANGO – phone 800-962-5768 or
 Daryl Wallace : dwallace@newyorkbussales.com
 Brian Lamaitis : blamaitis@newyorkbussales.com

ROCHESTER – phone 800-463-3232 or
 Gary Chichester: gchichester@newyorkbussales.com

ALBANY – phone 866-867-1100 or
 Ben Reiling: breiling@newyorkbussales.com
 Steve Searles: ssearles@newyorkbussales.com

WARRANTY – 800-962-5768 ext.237
 Morgan Jenkins: mjenkins@newyorkbussales.com

ALL of our Tech Tips can be found on the New York Bus Sales website at
<http://www.newyorkbussales.com/pages/bulletins.cfm>